


1200W / 1200WS

Touchless Soap & Sanitizer Dispenser



1200W

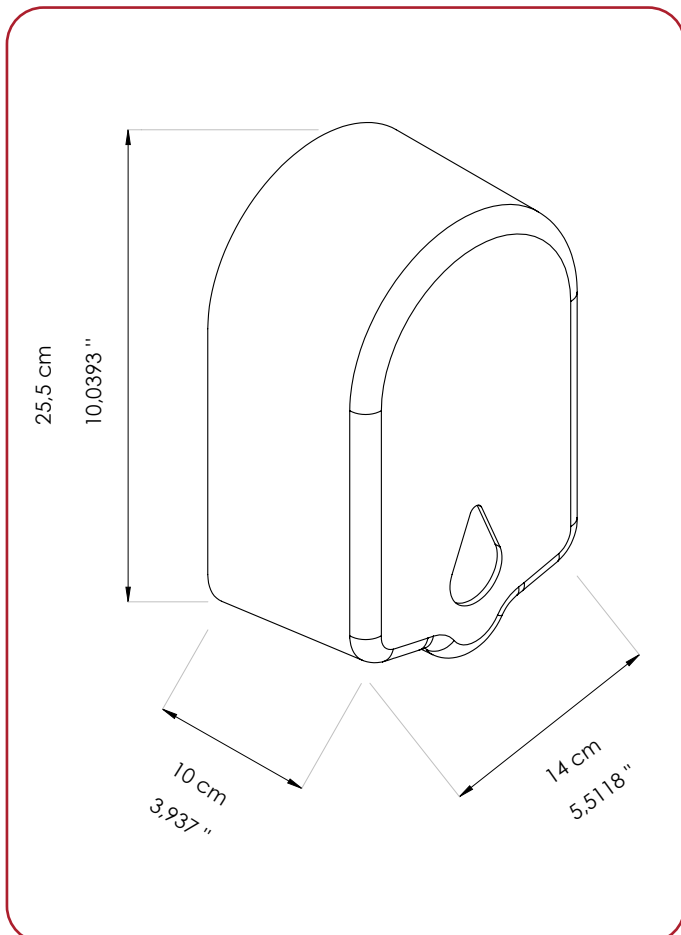

GENERAL DESCRIPTION


- + Touchless dispenser made with ABS plastic raw material.
- + Available in only white colour.
- + It is mounted with four steel 4 mm screws (provided in the box) with their 8 mm plastic plugs (also provided)
- + The lock system is exist to protect inside clean and safe.
- + Elegant design is suitable for all types of public toilets.
- + Transparent indicator helps to control liquid level inside.
- + Battery 4XDC6V
- + 1200 ml refillable capacity.
- + Spray and soap/gel pump option.
- + 1.00 ml drop pump.

COMPONENTS AND MATERIAL

- + 1200W, Soap/Gel white colour.
- + 1200WS, Spray white colour.

INSTALLATION

- + First measure out where the dispenser will be placed, mark four holes and drill into the wall.
- + Insert the provided wall plugs and screw in the top two screws, leaving a slight gap for the dispenser to slot onto.

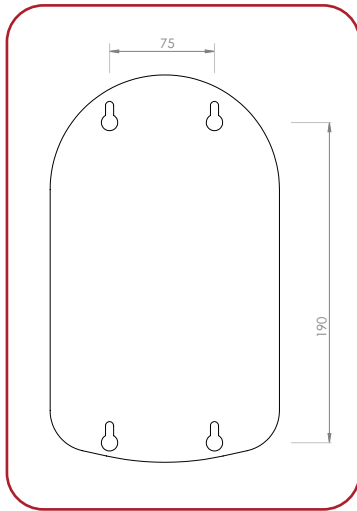

- + Open the dispenser lock before mounting the dispenser to the wall.
- + Slot the dispenser onto the two previously fixed screws and then screw final two screws.
- + Once the dispenser is secure, you can close the lid.

LOADING THE TOWEL ROLL

- + Open the dispenser lock to load paper inside.
- + Place the paper to the right place by using the handles and roller. Press "install paper" button to check if it works.
- + Then close the lid.

INSERTING THE BATERIES

1. Open the battery compartment by removing the cover.
2. Insert 13A/1.50V 4 alkaline batteries paying attention to the polarity. Alkaline batteries are highly recommended. Put the cover back on the battery compartment by pushing until "click".
3. Close the front cover of the dispenser.

ATTENTION

The dispenser cover must be closed to work properly. When the supply voltage is too low, Led will blink continuously and then the dispenser will not work. Please change the batteries immediately.

MOUNTING TEMPLATE

Should be minimum 150 cm high from the floor.

DISPENSER REPLACEMENT REQUIREMENTS AND RECOMMENDATIONS

The following recommendations are intended to provide guidelines on the best possible placement of the dispensers. Because every location a dispenser is to be mounted is different, depending on customer site, physical size limitations, and available space, these recommendations may not always be entirely possible to follow. However, when placing a dispenser installation must meet ADA requirements and should promote ease of use and be in union with its surroundings. Upon installation, the dispenser should be level and the job results. Professional, presentable and fully functional.

AFTERCARE INSTRUCTIONS

- + Regular cleaning with a soft cloth will keep the surface of your product looking new. Soapy water can be used to remove stubborn marks. Don't use abrasive or chemical cleaners as these may damage the surface finish over time. Use chemicals suitable for plastic products.
- + Don't expose to sunlight.
- + Don't respond to the product with force against the possibility of damage, deformation.
- + Don't throw any cigarettes and flammable materials into the product.

PRODUCT CODE	LITER	PRODUCT DIMEN.	CARTON DIMEN.	CARTON WEIGHT	INBOX QUANTITY	PALLET QUANTITY	GROSS PALLET DIMEN.	GROSS PALLET WEIGHT
1200W	1 L	10x14x25,5 cm	51x31x38 cm	11 kg	12	300	80x120x205 cm	290 kg
1200WS	1 L	10x14x25,5 cm	51x31x38 cm	11 kg	12	300	80x120x205 cm	290 kg